After World War II, a new generation of homeowners built countless Capes, ramblers, and ranch houses in the rapidly expanding suburbs around the country. From the split level to the super modern, these houses featured clean, minimalist moldings that reduced dust-catching shadow lines and often emphasized the quality of the wood. The signature profile of the era was the "clamshell" or sanitary molding, used in different scales for baseboards, casings, and more.

## THE MOULDING SHOWROOM IS EXCLUSIVE TO DUNN LUMBER BELLEVUE

#### Bellevue

2350 140th Avenue NE (425) 643-4400

#### **Everett**

425 E Casino Road (425) 353-0663

#### **Green Lake**

9300 Aurora Avenue N (206) 523-7777

#### Kirkland

11835 120th Avenue NE (425) 823-4455

#### Lynnwood

16920 Highway 99 (425) 742-4646

#### **Normandy Park**

17635 1st Avenue S (206) 242-1010

#### Renton

120 Factory Avenue N (425) 255-3429

#### **Lake Union**

3801 Latona Avenue NE (206) 632-2129

#### **Shoreline**

1108 N 185th Street (206) 542-2164


#### **Store Hours**

Monday-Friday, 7-6 Saturday 8-5 Sunday (Call for hours) dunnlumber.com

\$60 Local Delivery


## Mid-Century Modern

THE MOULDING SHOWROOM AT DUNN LUMBER BELLEVUE

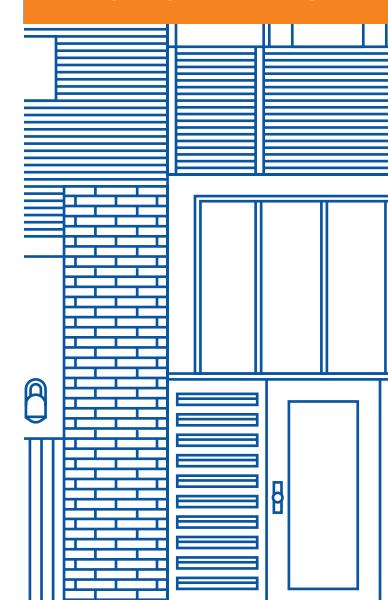

# Mid-Century Modern


### LEFT WALL METRIE MOULDINGS BRIGHTWORK

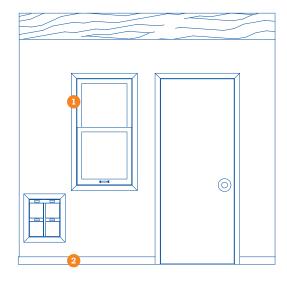

- CASING MGH3002
- BASEBOARD MGH3112 / MGH3288


### CENTER WALL

METRIE "VERY SQUARE SCENE-I"

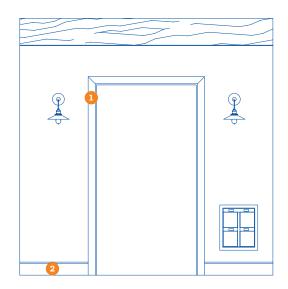

- 1 CASING METCVS1C2PMD
- 2 BASEBOARD METCVS1B2PMD / PFJ3206

#### RIGHT WALL WINDSORONE

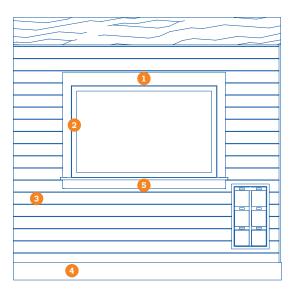

- 1 HEADER PFJ546
- 2 CASING PFJ544
- 3 WINDSORONE SHIPLAP WORS
- 4 BASE BOARD PFJ548
- 5 STOOL BUILDUP WOWS002 / WOCS004